

Fleet Vision Uno/Duo Hardwire



Install Guide



What's Included

- ✓ Dash Camera
- ✓ (2) 3M Adhesive Tape
- ✓ Power Adapter Cable
- ✓ Allen Key
- ✓ 3 Wire Cable for Hardwiring
- ✓ Lock Screw
- ✓ Mounting Bracket

Not included, but required: Multimeter

Not included, optional for installation:

- Adhesive clips, to neatly run cabling across windshield/vehicle
- Interior Soldering Iron or Crimp Connectors
- Electrical Tape



Prepare Your Materials

Ensure you have all the necessary materials ready.



Note: Installation is not recommended in temperatures below freezing. If unavoidable, use hot air to slightly warm the location that you are mounting the adhesive tape to.

Mounting Location

- Make sure the camera has a clear view of the road and doesn't obstruct your view while driving.
- Clean and dry the area for installation, ensuring no dust or oily residue is present.
- Measure and mark the center of the windshield.
- Measure horizontally to find the center of the windshield and vertically to find the best positioning for the front facing camera.

Fleet Vision Uno/Duo Hardwire



Install Guide



Mount The Dash Cam

- Peel off one side of the 3M sticker film and adhere it to the mount. Attach the mounting bracket to the dash cam with the lock screw.
- Peel off the opposite side of the 3M sticker film and adhere the mount to the marked location on your windshield. Ensure its securely attached.



Connect Power Cables




IMPORTANT: VEHICLE MUST BE POWERED OFF DURING THIS STEP. ALWAYS CONNECT THE CABLE TO THE DASH CAM FIRST, TO AVOID DAMAGE TO THE DEVICE.

- Connect the 3-wire cable and Device power box cable together. Plug into the camera.
- Run the device cable to headliner and neatly tuck cable under headliner. Continue running cable to the driver side A Pillar, down towards vehicle engine cabin, then towards vehicle battery.

Connect 3-wire Cable to vehicle battery as follows:

1. Connect RED WIRE to Power Positive + on vehicle battery.
2. Connect ORANGE WIRE to Ignition.
3. Connect BLACK WIRE to Power Negative – on vehicle battery.

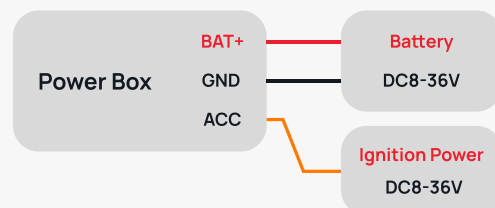

Power On The Vehicle

Body of camera LED with light up as follow:

- Power LED will illuminate and be constant (no flashing).
- The NET GPS and ALARM LED will flash at different intervals.
- Device will start and try to get network connectivity. Next, LED will start to flash.
- Once Device receives network connectivity, both the NET and GPS LED will be constant.
- The Dash Camera is now fully powered on and ready to drive.